

Kerckhoff B136 AV Instructions

Touch the Wall held Crestron to turn on projector



Connect HDMI to your Laptop/Macbook

- (Use adapter if necessary)

- Unmute volume button on the bottom if you are playing sound



Use Wall control to lower or raise the projector screen.



-User will need to look for the wall control on the East wall to either lower or raise the projector screen.

-It is a flick button so there's 3 different modes:

Press up once to raise projector screen.

Press down once to lower projector screen.

Press in the center once to stop raising/lowering projector screen.

Make sure the center is the selected button when finished adjusting the projector screen.

Reminders/Troubleshooting:

- If device reads the projector but doesn't show on screen, click Source Search or press the different source options on the remote.
- If the projector is not turned on, press the projector button next to the power button on the wallheld Crestron, projector should make a beeping sound when powered on
- Under Display settings, make sure external display is set to Mirroring/Duplicate
- For Apple users, you may be able to change your resolution under Display → Optimize for → Either Device or Projector, whichever user prefers.
- Projector screen should not display anything and projector's light should be turned off if system is shut down successfully.

**AFTER USER IS FINISHED, PLEASE SHUTDOWN SYSTEM BY PRESSING
THE POWER BUTTON ON THE TOP RIGHT OF THE CRESTRON SCREEN**